

# **TABLE OF CONTENTS**

| 5W  | SOLA | R  | BAT | TER | Y |
|-----|------|----|-----|-----|---|
| TRI | CKLE | CH | IAR | GER |   |
| MAI | NTAI | NE | R   |     |   |

SKU: RSP5TC-G1

| IMPORTANT SAFETY INSTRUCTIONS · · · · · · · · · · · · · · · · · · · | 0 |
|---|---|
| PACKAGE CONTENTS  | 0 |
| SPECIFICATIONS  | 0 |
| INSTALLATION ·····  | 0 |
| WARRANTY  | 0 |



## **IMPORTANT SAFETY INSTRUCTIONS**

Please read the User Guide carefully before installation.

### **IMPORTANT SYMBOLS**

WARNING

| WARNING | Indicates potentially dangerous conditions that could result in personal injury                                       |
|---------|---|
| CAUTION | Indicates conditions or practices that could result in damages to the unit or other equipment                         |
| NOTE    | Indicates procedures or functions that are important for proper and safe operation of the unit and/or other equipment |

| WARNING | DO   | NOT     | disassemble  | the   | unit   | or  | remove       | any    | attached    | components. |
|---------|------|---------|--------------|-------|--------|-----|--------------|--------|-------------|-------------|
| WARNING | Inco | rrect r | eassembly ma | ay re | sult i | n a | risk of fire | e or e | lectric sho | ock.        |

| WA BAIING | DO NOT    | operate  | the   | unit | if it | has | been | smashed, | squashed, | pierced, | 0 |
|-----------|-----------|----------|-------|------|-------|-----|------|----------|-----------|----------|---|
| WARNING   | otherwise | e damage | ed in | anv  | wav.  |     |      |          |           |          |   |

|   | The unit is only compatible with 12V lead-acid batteries. DO NOT connect it    |
|---|--|
|   | to other types of batteries or batteries with nominal voltages other than 12V. |
| J | Doing so may cause irreversible damages to the unit and/or battery explosion.  |

|         | To reduce the risk of a battery explosion, please follow the instructions |
|---------|---|
| WARNING | published by the battery manufacturer and review the cautionary markings  |
|         | on the battery carefully.   |

| ADMING | DO NOT place the unit on a surface constructed from combustible material. |
|--------|---|
| ARNING | Keep the unit away from explosives and corrosive substances.              |

|         | The unit is designed to withstand splashes and spills but is not fully |
|---------|--|
| CAUTION | waterproof. DO NOT submerge the unit in water or leave it in the rain. |

|         |           |     | unit | according | to | the | local | recycling | and | environmental |
|---------|-----------|-----|------|-----------|----|-----|-------|-----------|-----|---------------|
| CAUTION | regulatio | ns. |      |           |    |     |       |           |     |               |

CAUTION

DO NOT step, walk, stand, or jump on the unit. Localized heavy loads may cause variances of micro-cracks on the solar cells, which will ultimately compromise the reliability of the unit.

NOTE

Clean the surface of the solar trickle charger maintainer as necessary for optimal performance.

## **PACKAGE CONTENTS**

- 1 x Renogy 5W Solar Battery Trickle Charger Maintainer
- 1 x SAE to Ring Terminal Cable
- 1 x SAE to Alligator Clip Cable
- 1 x SAE to Cigarette Lighter Plug Cable
- 8 x Suction Cups
- 1 x User Guide

## **SPECIFICATIONS**

| Rated Maximum Power         | 5W                                       |
|-----------------------------|--|
| Open Circuit Voltage        | 23.57V                                   |
| Short Circuit Current       | 0.31A                                    |
| Optimum Operating Voltage   | 18V                                      |
| Optimum Operating Current   | 0.28A                                    |
| Connector                   | SAE                                      |
| Operating Temperature Range | -4~140°F / -20~60°C                      |
| Dimension                   | 11.4 x 7.3 x 0.2 inch / 290 x 185 x 5 mm |
| Weight                      | 10.8 oz / 306.6 g                        |

- 04 -

- 03 -

### INSTALLATION

WARNING

DO NOT leave the trickle charger maintainer connected and unattended for extended periods of time. Check the battery status frequently for safe operation.

WARNING


Place the trickle charger maintainer as far away from the battery as the adapter cables permit. DO NOT place it directly above the battery.

CAUTION

The trickle charger maintainer MUST be disconnected from the battery or cigarette lighter port when starting the engine or driving the vehicle. Electric surges from the alternator when starting and running may damage the trickle charger maintainer.

NOTE

The trickle charger maintainer is designed to compensate for the battery self-discharge. Please do not rely on it for a full charge.

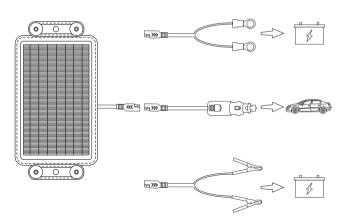

#### CONNECTING DIRECTLY TO THE BATTERY

- Check the polarity of the battery terminals. The positive (POS, P, +) terminal usually has a larger diameter than the negative (NEG, N, -) terminal.
- Connect the included SAE to Ring Terminal Cable or SAE to Alligator Clip Cable to the battery.
- If the battery is installed in the vehicle, the vehicle ground type must be identified. For a negative-grounded vehicle, first connect the positive (red) alligator clip or ring terminal to the positive (POS, P, +) terminal of the battery, and then connect the negative (black) alligator clip or ring terminal to the vehicle chassis or engine block away from the battery. For a positive-ground vehicle, first connect the negative (black) alligator clip or ring terminal to the negative (NEG, N, -) terminal of the battery, and then connect the positive (red) clip to the vehicle chassis or engine block away from the battery.
- If the battery is outside the vehicle, a 24 inch (610mm) 6 AWG (13 mm2) insulated battery
  cable must be first connected to the negative (NEG, N, -) battery terminal. Then connect
  the positive (red) alligator clip or ring terminal to the positive (POS, P, +) terminal of the
  battery and connect the negative (black) alligator clip or ring terminal to the free end of the
  battery cable away from the battery.
- Connect the SAE to Ring Terminal Cable or SAE to Alligator Clip Cable to the trickle charger maintainer.
- Place the trickle charger maintainer, facing due south (or north), in the path of the sun.
   Make sure that no shadows are cast on the trickle charger maintainer.

WARNING

Electric shock can occur if the adapter cable is damaged. DO NOT use a damaged adapter cable to maintain or charge the battery. Position the adapter cable properly to reduce the risk of damage by the hood, door, or hot engine parts.

WARNING

If it is necessary to close the hood during the maintaining or charging process, ensure that the hood does not touch the metal part of the alligator clips or ring terminals, or cut the insulation of the adapter cable.

WARNING

Stay clear of fan blades, belts, pulleys, and other parts that can cause injury.

WARNING

NEVER allow the alligator clips or ring terminals to touch each other.

WARNING

When disconnecting the trickle charger maintainer, please follow the above procedures in reverse order.

WARNING

DO NOT connect the alligator clips or ring terminals to the carburetor, fuel lines. or sheet-metal body part.

#### CONNECTING TO THE CIGARETTE LIGHTER PORT

- Park the vehicle in direct sunlight with the front facing due south (or north).
- Connect the trickle charger maintainer to the included SAE to Cigarette Lighter Plug Cable.
- . Insert the cigarette lighter plug into the cigarette lighter port.
- · Attach the trickle charger maintainer to the windshield using included Suction Cups.

NOTE

For some makes or models of vehicles, the cigarette lighter port may not operate when the ignition is turned off. In such cases, please connect the trickle charger maintainer to the battery directly.

NOTE

Dark window tints may seriously affect the performance of the trickle charger maintainer if it is attached to the inner side of the windshield. For optimal performance, please route the adapter cable through the open window and place the trickle charger maintainer outside the vehicle.

### WARRANTY

- RENOGY products are covered by a 12-month limited warranty from the original purchase date. If any problems occur, please contact us for assistance. Refer to the last page of User Guide for contact information.
- We only provide after-sales services for products that are sold by RENOGY or retailers
  and distributors authorized by RENOGY. If you have purchased your unit from other
  channels, please contact your seller for more information about return and warranty.
- Please register your purchase(s) directly at www.renogy.com/warranty-registration or your region's corresponding website so that we can stay in touch and contact you in the unlikely event that a safety recall is required.

#### FCC Compliance:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must withstand any interference received, including interference that may cause undesired operation.



-07-





Renogy reserves the right to change the contents of this manual without notice.

**US** 9 2775 E Philadelphia St, Ontario, CA 91761, USA 999-287-7111

www.renogy.com

□ customerservice@renogy.com

https://www.renogy.cn
 sales@renogy.cn

CA | 

 https://ca.renogy.com
 onlinestoreca@renogy.com

UK | ♣ https://uk.renogy.com onlinestoreuk@renogy.com