

EasyTouch RV - Get Connected

Internet WiFi Setup (with router)

- (1) Press the Settings icon 👸 on the EasyTouch thermostat.
- Press the WiFi icon
- 3 Press the Internet (WPS) button and proceed to the next steps below.



CONNECT TO WIFI

Press the "WPS" button on your internet router.

Note: Button location will vary depending on the brand of your router, refer to your router manual for more information.





Return to the thermostat display and look for either the WIFI CONNECTED! message or WiFi indicator icon at the top of the display.

Almost There! Create Account





EasyTouch RV - Get Connected

Creating an Account (Smartphone)

Download and install our free mobile application from either the Google Play or Apple's App Store.





Cocate and launch the EasyTouch RV application on your phone or smart device.



Press the WiFi icon and complete the EasyTouch RV account registration form.

LINK ACCOUNT

- Return to the EasyTouch display and power off the thermostat. Press the Settings () icon followed by the WiFi icon.
- Press the "Link Account" button and then enter the 6-digit code into your EasyTouch mobile application.





Congratulations!