

WIRELESS CONTROLLER

Through the Wireless controller the customer is able to limit the maximum power as well as select the profile that best adapts to their style of riding.

In order to access the menu, you must proceed with the following indications, always with the board initially disconnected.

1. Place the drop over the Onean logo and press on it, as indicated in the following image.



A) SYNCHRONIZATION

The wireless controller will enter search mode until a board is detected and the sync light will turn on.

2. Continue to press on the drop. The LED display in the battery indicators will begin to progressively light up. Each LED indicates a different setting.
3. Once a selection is chosen, press on the drop again to access the submenu.

Place the battery inside its compartment and the sync light will blink indicating a successful synchronization.

B) MAXIMUM POWER

The top LED display bar will progressively complete. Press on the drop to set a new profile depending on the following functions.


| LEDs | Wattos | Visualization |
|--------|---------|---|
| 1 LED | 1.500w |  |
| 2 LEDs | 2.300w |  |
| 3 LEDs | 5.100w |  |
| 4 LEDs | 7.400w |  |
| 5 LEDs | 10.000w |  |

C) WIRELESS CONTROL PRESSURE SETTINGS

The top LED display bar will progressively complete. Press on the drop to set a new profile depending on the desired phase.

- E1: 5 power levels.
- E2: 3 power levels.
- E3: similar to E2 with more power on the second level.

- E4: 0 to 100%, designed for experienced riders.
- E5: linear power depending on the pressure.

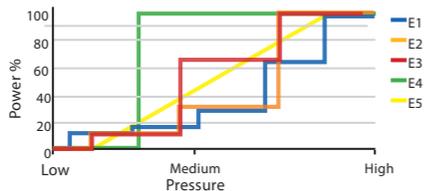

D) RESET

E) STATUS CHECK

Place the drop over the Onean logo and press on the drop only one time instead of holding it

pressed. The controller will show the preferences for each category.

PIC TAG #ONEAN #CARVER

carver
Quick Start Guide

We're here to help

www.onean.com | support@onean.com

Find the Full User's Manual at www.onean.com/my-account/

[@oneanboards](#) [fb.me/oneanboards](#) [@oneanboards](#)

EN

WELCOME TO THE CARVER QUICK START GUIDE

Thank you for purchasing a Carver X Board.

This board has been designed for a quick and easy assembly. Please follow the instructions in this Quick Guide. The first assembly of the unit will take approximately 15 min. It is extremely important that these procedures are carried out correctly.

This guide contains information about the assembly and the use of the Carver.


MAIN SECURITY CHECKS

- Always check the unit before entering the water
- Avoid entering the water through wave brake zones
- Always wear the leash attached
- Never insert hands or feet inside the jet unit
- Be aware that the board doesn't have a break
- Don't touch the JetUnits stainless steel tube after use

WHAT COMES IN THE BOX?

A Carver X Board with Jet Unit
B 2 x Lithium Ion Battery
C 2 x Battery Charger
D Wireless Controller & Trigger

E Qi Charger
F 2 x Wide Footstraps
G Leash + Security Key
H 2 x US Box Fins

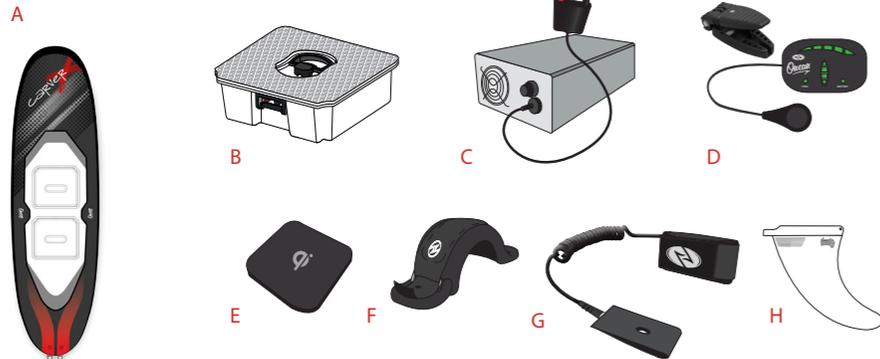


Please read the entire guide before using this product. It is responsibility of the customer to use the product supplied by AquilaBoards in a secure way following the indicated guidelines. The company won't be responsible for any damages occurred to the customer or the unit due to inappropriate use.

Need more help? We're only an email away support@onean.com

INITIAL ASSEMBLY AND CONFIGURATION


INSERT THE BATTERY MAGNET

 Before using the unit for the first time, the cylindrical magnet must be inserted in the hole inside the battery compartment.



INSERT FEMALE CONNECTORS


In the bottom part of the battery you will find two holes where the battery will be connected with the board. Please, screw the female connectors using a screwdriver.

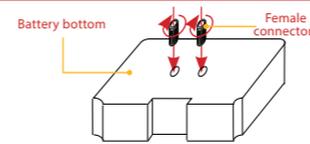

POSITIONING THE FOOTSTRAPS

The board incorporates inserts for goofy and regular riders.


1. Depending on the style of riding, place the footstraps over the desired inserts. One on the front of the board and one on the back.
2. Place the screw through the screw insert and hold the footstrap.

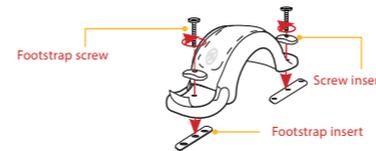

INSERT THE FINS


In order to insert the fins, flip over the board and place it over a flat surface.

1. Insert the fin inside the fin box as shown in the picture.
2. Insert the metallic square and align the holes.

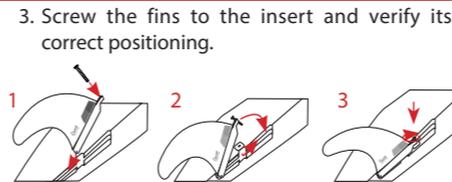

INSTALL THE LEASH

1. Insert the screw through the insert and hold the leash.
2. Align the holes with the insert located on the left hand lower side of the board.
3. Screw the leash to the board and verify its correct positioning.

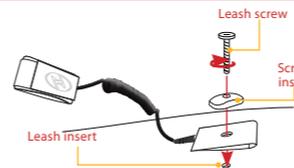


BATTERY CONNECTION

1. Please check that the watertight seal and the frame are clean, without sand or signs of deterioration. Check the battery compartment and make sure it doesn't contain any water.
2. Turn the drain cap 360° counter-clock wise. Place the battery over the pad, near the compartment where the battery must be inserted.
3. Grab the battery by the top handle and insert it in the compartment. The connection receptor will light up indicating a successful connection.
4. Once the battery is inserted in the board, turn




the handle 180° clock wise and fold the handle. In case that the handle doesn't turn easily, please press on the battery so the watertight seal is properly placed.

 5. Turn the drain cap clock wise until locked to assure water tightness.



BATTERY CHARGE

Place the drop near the battery display, the LED indicator will show the remaining battery.

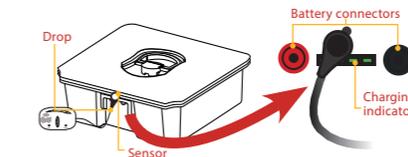

| Visualization | Charge% |
|---------------|---------|
| | 20% |
| | 40% |
| | 60% |
| | 80% |
| | 100% |

RECHARGING THE BATTERY



Always connect the charger to the wall outlet before connecting it to the battery.

It is extremely important to respect the connector colors (red with red with black with black). Reverse polarity could damage the battery irreversibly.

